

Silversmith

Users Manual




Operation and Setting up

The operating software used by the Silversmith® is pre-installed on delivery. Software helpfiles are available online from www.silverjuke.net/en/resources.html


Setting up the Silversmith

- 1) Connect the line-out leads at the back of the base, ensuring you do not cross channel 1 with channel 2. (see fig.1 below)

Fig.1

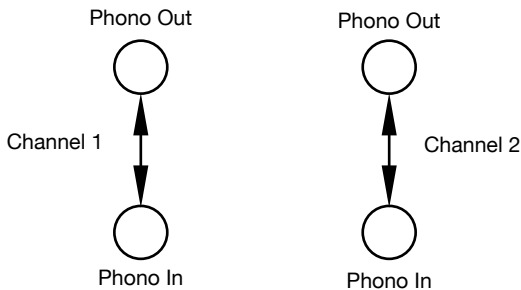

- 2) Connect Speakers to speaker output.
- 3) Connect Power Lead (240V)
- 4) Switch power on at base
- 5) Connect wireless arial
- 6) Turn jukebox on with soft start button (located at top of screen) and allow jukebox to boot up. The software will start-up automatically. The jukebox is now ready to play.

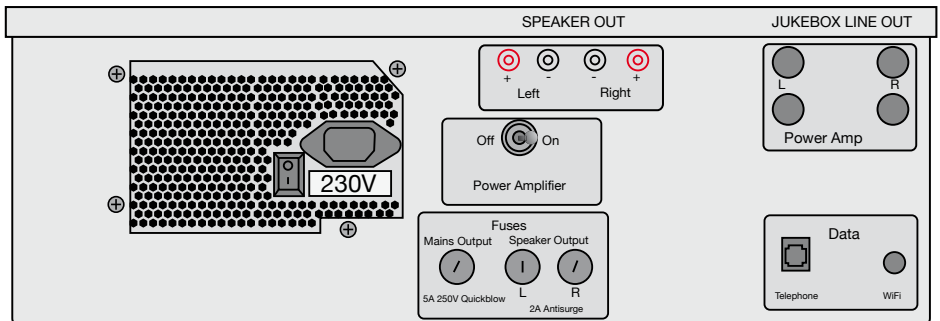

To Enter Settings

To load music and control other functions of the Silversmith® you must get passed 'kiosk mode' in the software. The procedure for this is outlined below.

- 1) Connect a keyboard to the keyboard input
- 2) Connect mouse if required (optional)
- 3) Re-boot the Silversmith® via the soft-start button. On re-boot press 're-start' on Windows panel
- 4) Press F11 on keyboard function keys
- 5) On prompt to exit kiosk mode, click 'ok'
- 6) Click on the downward pointing arrow, located in the top left of the screen
- 7) Click on 'settings'
- 8) Further information is available online at www.silverjuke.net/en/resources.html

Easy CD Extractor

To load and rip your own CDs we advise you use the Easy CD-DA Extractor software which comes pre-installed on your Silversmith® jukebox.

For help with this please go to www.poikosoft.com

To fully utilise all the features of the Silversmith© jukebox you'll need to access the internet either via ethernet connection or wireless connection. Help with this can be found within the Windows help files.

Looking after your Silversmith® Jukebox

If left in 'silent' mode for any length of time, we advise to switch off the amplifier, using the switch located on the control panel at rear, to cut out any speaker 'noise' or interference.

Fuse Outlets

The Silversmith® uses the following fuses

2 x 2A speaker outlets

1 x 5A mains fuse

Cleaning

Stainless steel cleaner should be used to clean the body of the Silversmith®.

This is available from JukeBox45s. Use a lint-free cloth when cleaning.

For light scratches we provide a rubbing pad, also available from JukeBox45s.

Clean the screen with a dry soft, lint-free cloth only.

